



# INSTALLATION INSTRUCTIONS


## COMBINATION SLIDING DOOR PULL AND LOCK

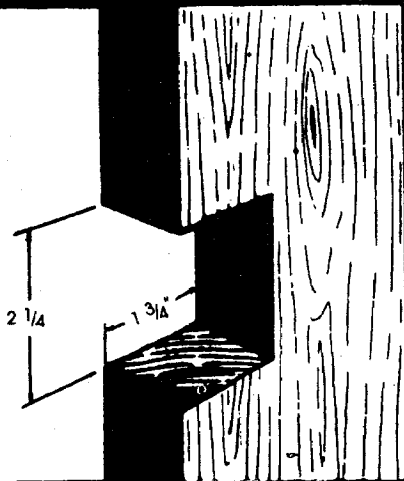

**1** Cut one simple notch in door.

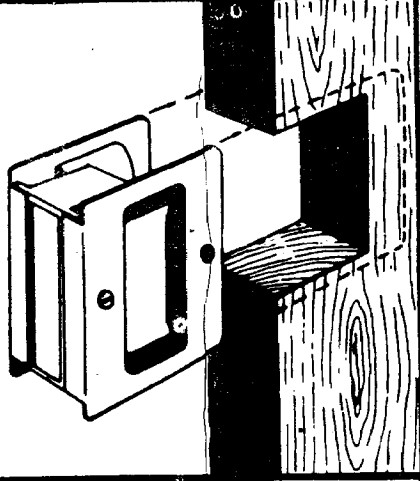


**2** Slip pull into position as shown.

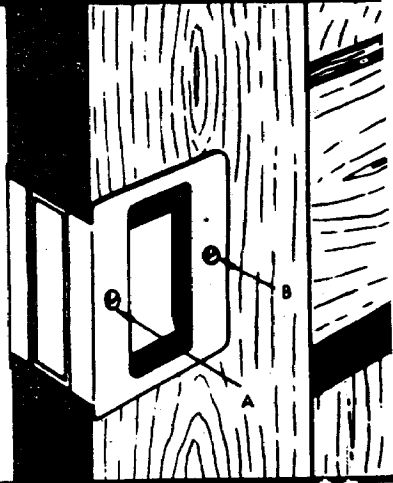


**3** (A) Fasten machine screw which tightens and automatically aligns pull. (B) Insert wood screw and tighten.

## INSTALLATION OF STRIKE PLATE FOR LOCKING SET ONLY

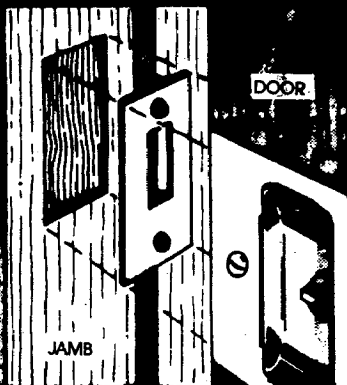

**1** Mark and mortise strike on jamb to correspond to lock position on door.

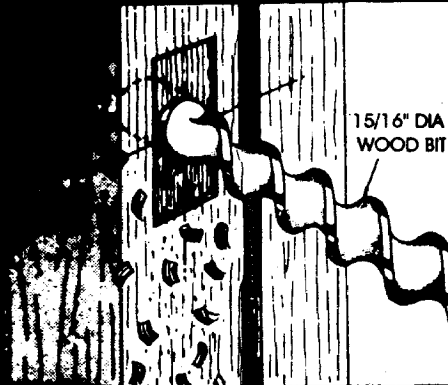


**2** Drill 15/16" diameter hole 1/2" deep in center of mortise.



**3** Screw strike plate into position using #6x5/8" lg. flat head wood screws.

## TO ASSEMBLE AFTER REVERSING PLATES

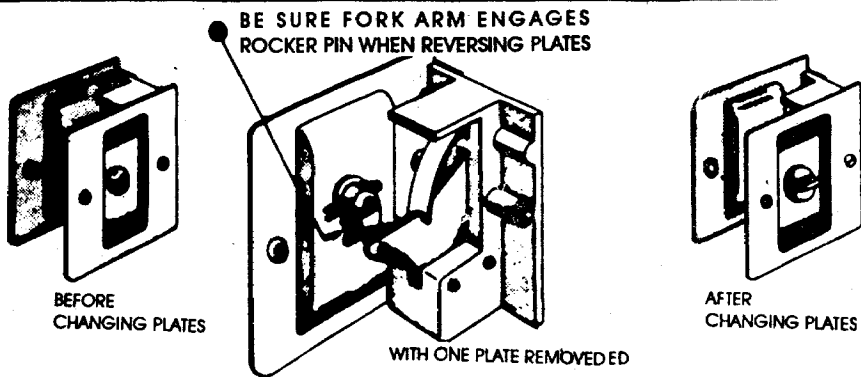

SDL16 & SDL17

**CAL-ROYAL PRODUCTS, INC.**

CITY OF COMMERCE, CA 90040  
 TEL: 323-888-6601 FAX: 323-888-6699  
 Email: sales@cal-royal.com

When it is desirable to reverse outside plates on lock assembly, first remove machine screw on each side-change plates from side to side (making sure that fork arm engages rocker pin) and re-assemble.